

Solar Attic Fan Turret Extension Installation Supplement



10821 North 23rd Avenue
Phoenix, AZ 85029
800-363-9865
www.solaratticfan.com




IMPORTANT: Please take the time to read through the ENTIRE instructions prior to starting any work. These instructions should be used in conjunction to the standard solar attic fan installation instructions.

CAUTION: The fan will operate when exposed to the sun. To prevent the fan from running, cover the solar panel with a piece of cardboard or soft cloth taking care not to damage the solar panel.

PARTS LIST


- A. Solar Attic Fan Turret Extension
- B. (9) Phillips Head Stainless Steel 1/2" Self-Tapping Screws

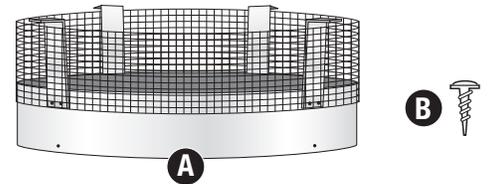

Step 1

Turn solar attic fan unit upside down and place it on a soft cloth or towel to prevent damaging the solar panel. Locate the plastic wire clip on the inside wall of the flashing. Remove the screw on the clip to remove it from the flashing (the wire will stay connected to the clip - see closeup).

NOTE: Take care not to damage the solar panel or the fan blades.

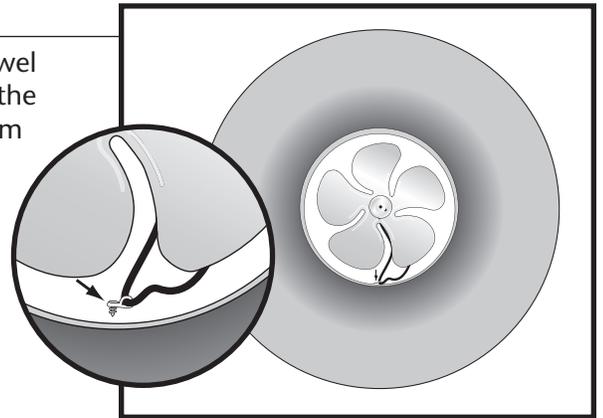


Step 2

Carefully turn the unit back upright. Remove the two screws on the aluminum brackets on top of the housing holding the solar panel and place to the side.

Pull up the solar panel to allow access to the four screws that secure the housing to the flashing "L" brackets. Remove all four screws.


Because the fan will continue to run when removed from the flashing, cover the solar panel with a piece of cardboard or soft cloth taking care not to damage the solar panel. Pull up on the housing to remove it from the flashing.

IMPORTANT: The fan will continue to run once the housing is removed from the flashing if it is not shielded from the sun. To prevent the fan from running, cover the solar panel with a piece of cardboard or soft cloth.

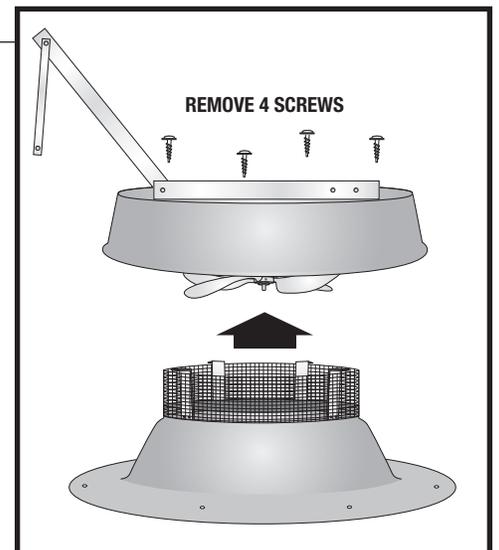

Step 3


Remove the 4 housing "L" brackets by unscrewing the 2 self-tapping screws holding each bracket in place.

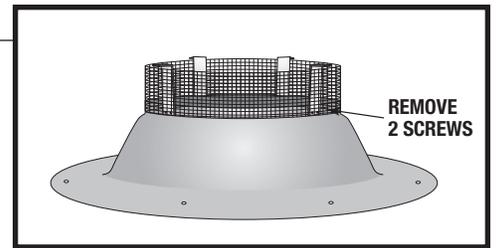

Step 4


Place the flashing skirt over the flashing. Press down the rubber ring all around the flashing.

NOTE: Flashing skirt sold separately and is recommended for all tile roof installations.

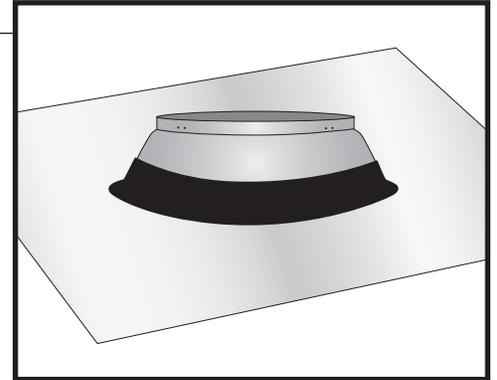

Step 5

Slip turret extension over the flashing lip. Secure with the (4) self-tapping screws provided.

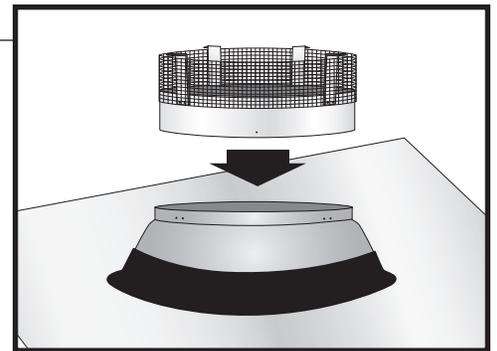

Step 6

Place the housing on top of the turret extension and line-up the pre-drilled screw holes on the housing with the holes on the "L" brackets. Attach housing with the (4) self-tapping screws provided.

Carefully turn over the unit and place it on a soft cloth to prevent damaging the solar panel. Locate the plastic wire clip and reattach it to the flashing wall with the new screw provided (see closeup).

Re-attach the two screws on the aluminum brackets on top of the housing holding the solar panel (removed at Step 2).

